


Titan 2006 Lock – *Quick Start Instructions*

Input correct code then turn the safe handle

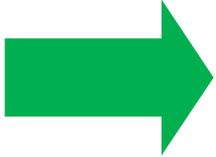

Open Lock

Enter default "Master Code"
1 2 3 4 5 6 #



Install a 9 volt alkaline battery, Duracell is recommended. To install the battery, pull the lock/unlock indicator tab out slightly and turn the ring counterclockwise (left) to reveal the battery storage area and battery connector. Attach the battery then push the ring back toward the base while turning clockwise (right). The ring will 'click' when properly seated.

1. Each time you press a number, letter, or other character on the keypad of your electronic safe lock beeps and the red LED flashes. The 🗨️ symbols in examples show the number of beeps you hear.
2. Your lock is currently in Multiple User Mode where only one code is required to open. If you want the lock to operate in Dual Control Mode where two codes are required to open, then you must switch modes before changing or adding codes or programming any features of the lock. Failing to do so will result in not being able to set the lock to Dual Control in the future. Once the lock is set to Dual Control it will not be possible to return it to Multiple User Mode.
3. Error Beep: A long beep (called a BRAP) during any programming sequence indicates you have made an error. Restart the sequence from the beginning.
4. Error Penalty: If you enter five incorrect codes in a row within a ten minute period, the lock starts a ten-minute penalty time. If you press any button during this time, you will hear two BRAPs, and the lock will not open. You have no recourse other than to wait ten minutes before entering a valid code to open the lock.

Multiple User Mode

Opening the Lock using the Factory Default Code - To open the lock, enter 1 2 3 4 5 6 # then turn the safe handle.

Creating a New Code

7 4 * MASTER CODE # (🗨️🗨️🗨️🗨️) PIN POSITION # (🗨️🗨️) NEW CODE # (🗨️🗨️) NEW CODE # (🗨️🗨️)

Changing Your Own Code or the Factory Default Code

2 2 * YOUR OLD CODE # (🗨️🗨️🗨️🗨️) NEW CODE # (🗨️🗨️) NEW CODE # (🗨️🗨️)

Dual Control Mode

Change from Multiple User Mode to Dual Control Mode

This non-reversible function change must be done before the factory Master Code is changed for the first time.

7 6 * 1 2 3 4 5 6 # (🗨️🗨️🗨️🗨️) 1 # (🗨️🗨️) 1 # (🗨️🗨️)

Note: User 2 will be automatically installed as code 2 2 2 2 2 2.

Opening the Lock using the Factory Default Codes

The factory default Master Code is 1 2 3 4 5 6 #. The factory default User Code in PIN position 2 is 2 2 2 2 2 2.

To open the lock, enter 1 2 3 4 5 6 # (🗨️🗨️🗨️🗨️) 2 2 2 2 2 2 # (Codes must be entered within 30 seconds of each other).

Creating a New Code

7 4 * MASTER CODE # (🗨️🗨️🗨️🗨️) PIN POSITION # (🗨️🗨️) NEW CODE # (🗨️🗨️) NEW CODE # (🗨️🗨️)

Changing Your Own Code or the Factory Default Code

2 2 * YOUR OLD CODE # (🗨️🗨️🗨️🗨️) NEW CODE # (🗨️🗨️) NEW CODE # (🗨️🗨️)